



kaleidescape

## Creating Scenes

### Quick Reference Guide

---

For those times when you don't have two hours to watch an entire movie but still want to enjoy a memorable experience with family and friends, the innovative scene creating capability of your Kaleidescape system lets you instantly jump to the very best moments in your favorite films – all without needing to skip through chapters, or access complicated disc menus.

Kaleidescape's team of movie buffs has handpicked and bookmarked many of the most iconic scenes and added them to the Movie Guide. You too can easily save the most unforgettable moments from your favorite movies, TV shows, concerts and musicals. The techniques described in this quick reference guide outline the steps needed to:


- ▶ Create, edit, and save a new scene
- ▶ Play a created scene
- ▶ Name an unsaved scene
- ▶ Rename a created scene
- ▶ Forget a scene

### Create, Edit and Save a New Scene

The following procedure describes the steps used to create, edit and save a new scene.

1. Select a movie and press the **PLAY** button.
2. Watch the movie or use the navigation buttons (fast-forward, reverse, chapter skip) to locate a favorite part of the movie.
3. Press the **PAUSE** button when at the start of the scene to be captured.
4. Press the **Info** or **Playback Options** button.
5. Use the right/left arrow buttons and scroll to **New Scene**.

6. Select **Set Start of New Scene**. See Figure 1.

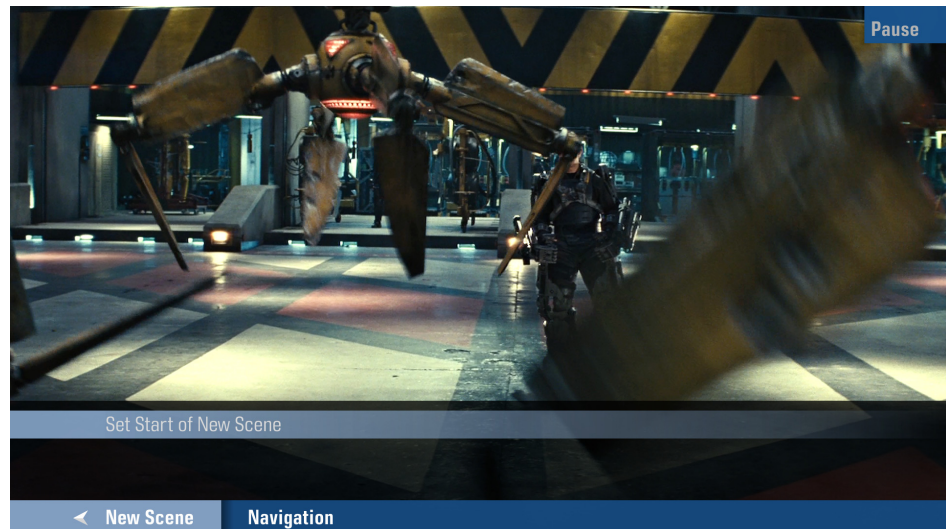


**Figure 1** Set the Start of a New Scene

7. To modify the start of the new scene, continue watching the movie or use the navigation buttons to locate the correct starting point.

**Tip:** For quick access to playback options, the *New Scene* overlay can remain open during playback and navigation.

8. Press the **PAUSE** button.
9. Select **Change Start of New Scene**. See Figure 2.

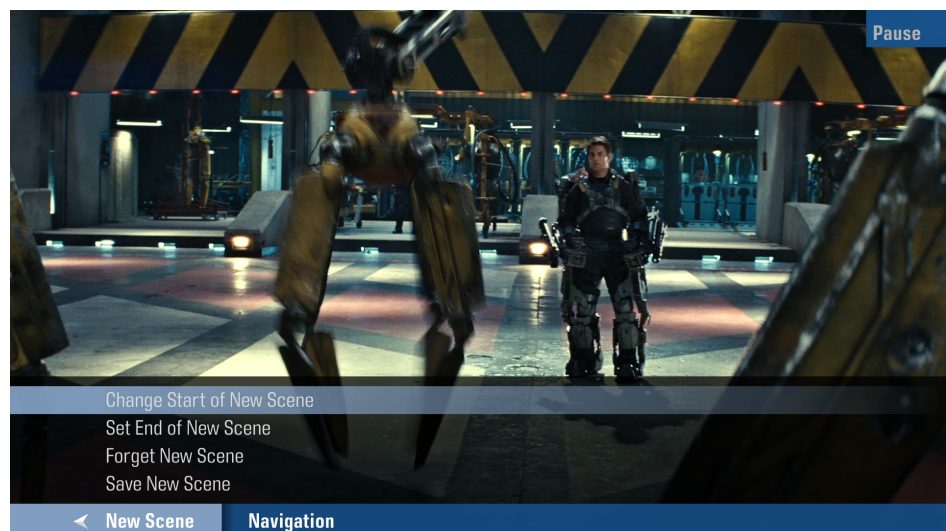


**Figure 2** Change the Start of a New Scene

Repeat the process until you are satisfied with the start of the new scene.


10. Find the end of the scene – using fast-forward, reverse or skipping chapters is fine – then press the **PAUSE** button.

11. Select **Set End of New Scene**. See Figure 3.

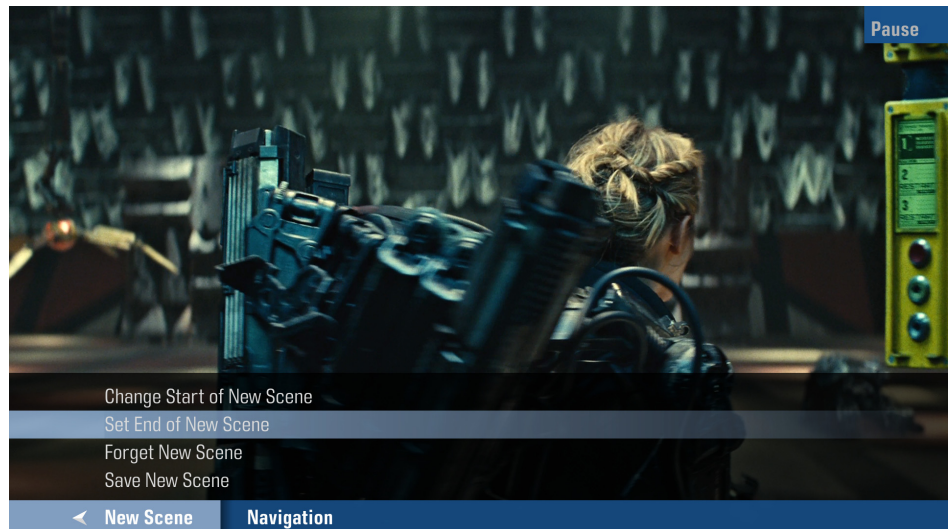

**Figure 3** Set the End of a New Scene


12. To modify the end of the new scene, continue watching the movie or use the navigation buttons to locate the correct ending point.
13. Press the **PAUSE** button.
14. Select **Change End of New Scene**. See Figure 4.

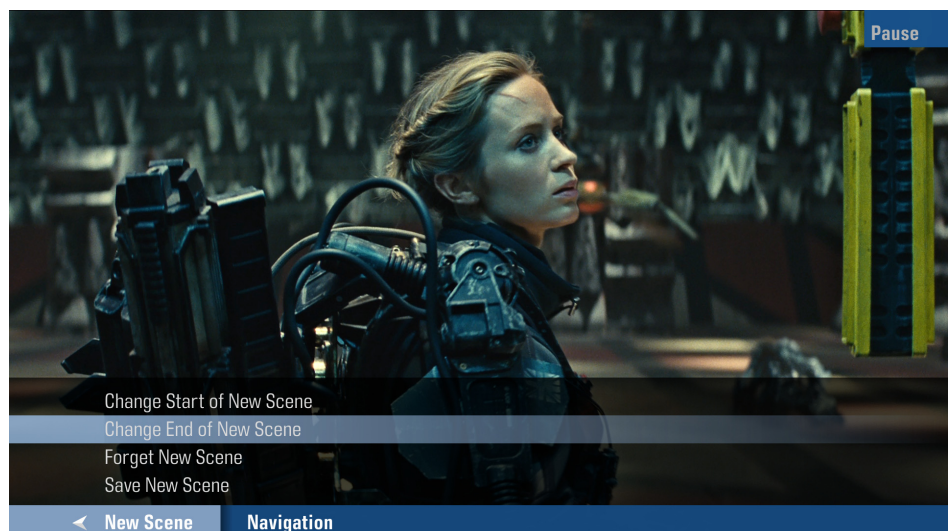

**Figure 4** Change the End of a New Scene

Repeat the process until you are satisfied with the end of the new scene.

15. When you are ready to save the new scene, select **Save New Scene**. Use the onscreen keyboard and name the scene. See Figure 5.

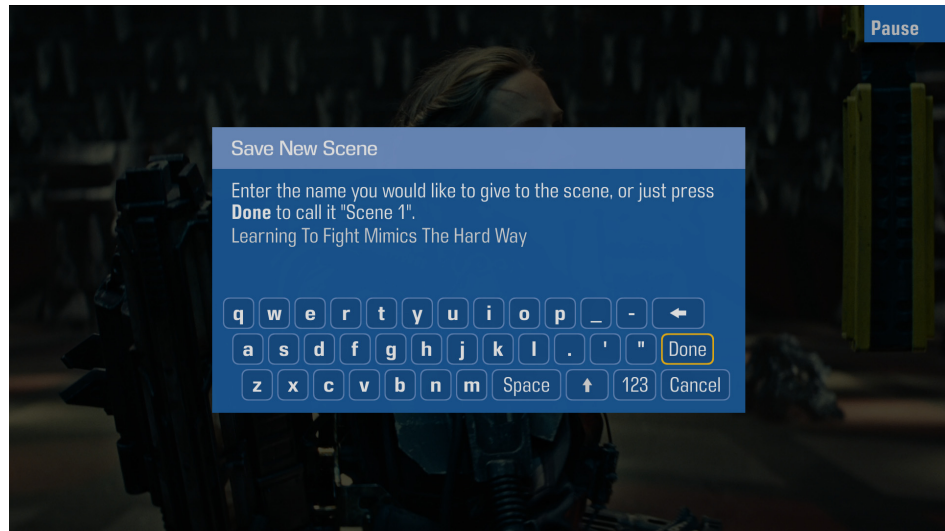

**Figure 5**      **Name a New Scene**

**Note:** Once a scene is saved, the start and end of the scene can no longer be changed. If you wish to modify the start or end of the scene at a later time, do not save the scene.

16. To create multiple scenes from the same movie, repeat the steps described above giving each scene a unique name.

## Play a Created Scene

A created scene can be accessed and played from any movie place including the Scenes collection on the **Movie Collections** page.

The *Scenes* collection lists movies that include at least one scene. To view only a list of titles with scenes you created, select **Show movies with scenes I marked**.

1. Locate the movie.
2. Press **OK** to open details for the movie.
  - a. When opened from the *Scenes* collection, a list of scenes appears.
  - b. When opened from any other movie place, scroll down and select **Play Scene** to see a list of scenes.



- 3. Select the created scene and press the **Play button**. Scenes you create are designated with a ♥. See Figure 6.

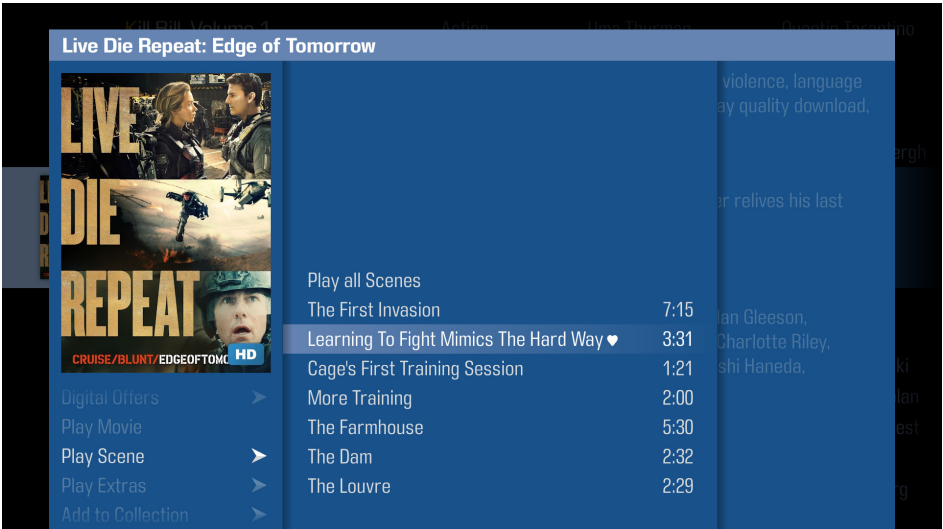


Figure 6 Select a Created Scene

Name an Unsaved Scene

When a scene is not saved, it retains the temporary name *New Scene*. A permanent name can be assigned by saving the scene.

- 1. Select the movie.
- 2. Scroll down to **Save New Scene** and press **OK**. See Figure 7.


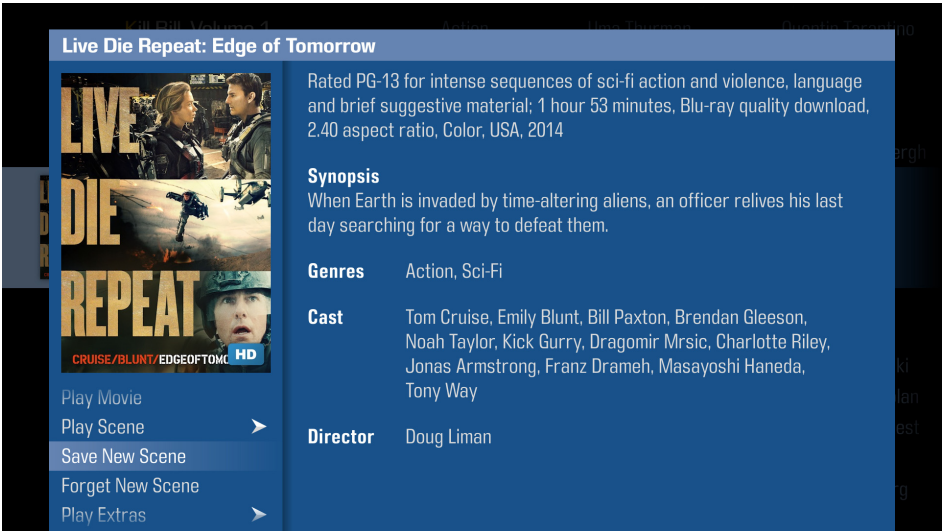


Figure 7 Save a New Scene

3. Use the onscreen keyboards to name the scene. Select **Done** when finished. See Figure 8.

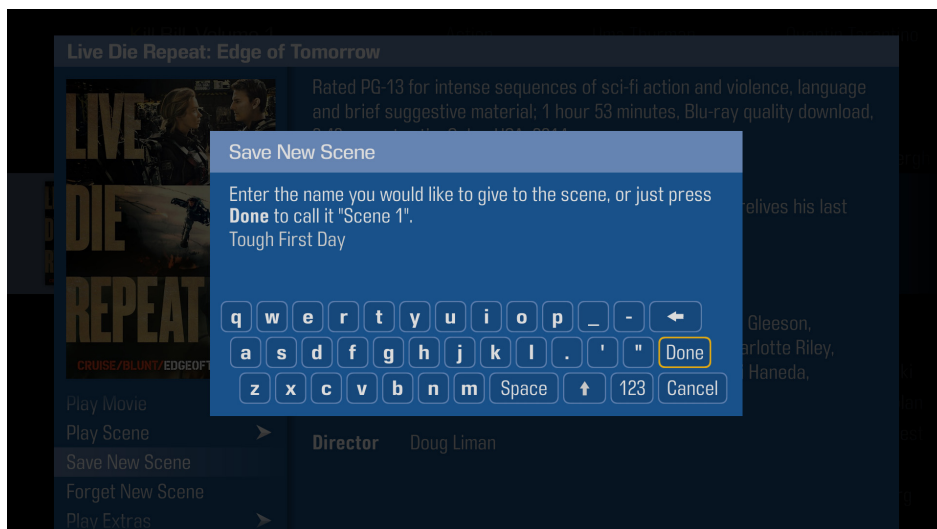

**Figure 8** Name a Scene


**Note:** A scene must be named before another scene from the same movie can be created.

## Rename a Created Scene

Use the following procedure to rename a scene you created.


**Note:** Scenes that are part of the Movie Guide cannot be renamed, but they can be forgotten. See the *Forget a Scene* section that follows.

1. Select the movie.
2. Scroll down to **More Options** and press **OK**. See Figure 9.

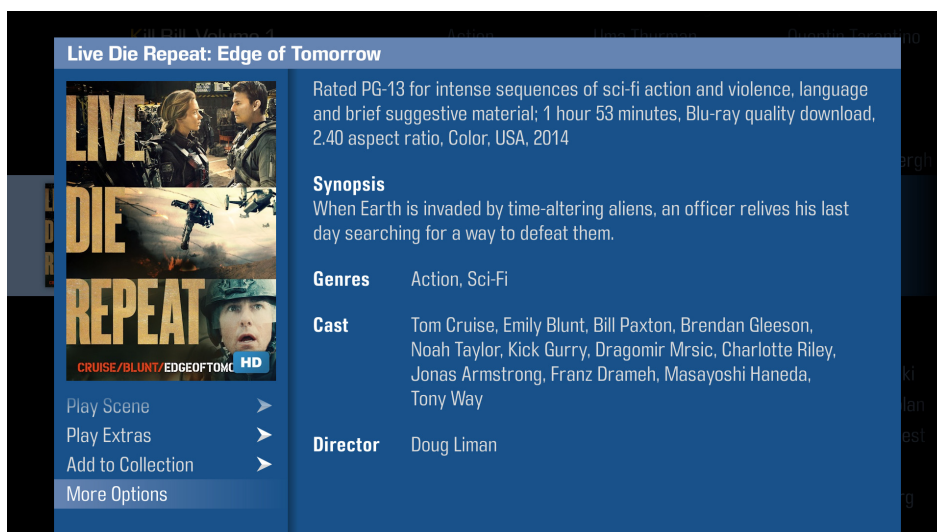


**Figure 9** Select More Options

3. The *More Options* page appears. Select **Rename Scene**.
4. Locate the scene to be renamed and press **OK**. See Figure 10.

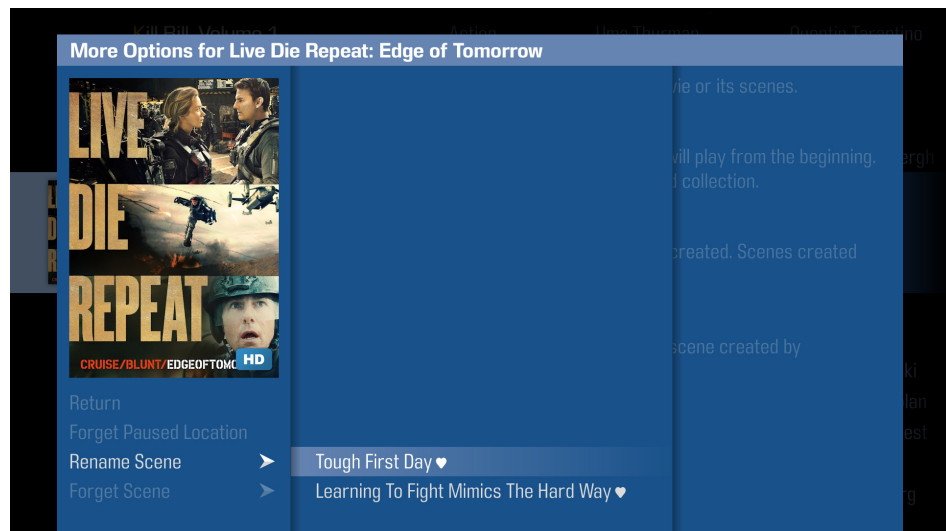

**Figure 10** Select Scene to Rename

5. Use the onscreen keyboard to rename the scene. Select **Done** when finished. See Figure 11.

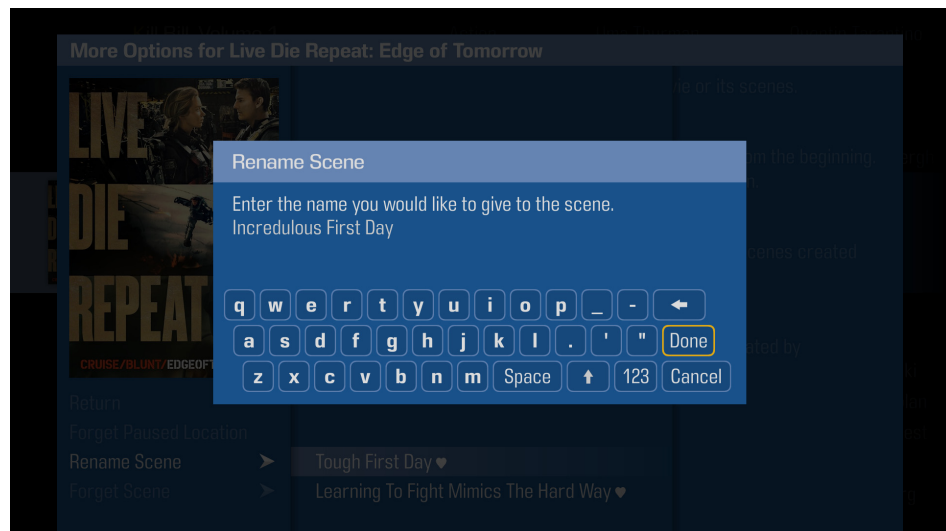


**Figure 11** Rename a Scene

## Forget a Scene

Use the following procedure to forget, or delete a scene.


1. Select the movie.
2. Scroll down to **More Options** and press **OK**.
3. Select **Forget Scene**.

4. Locate the scene to forget and press **OK**. See Figure 12.

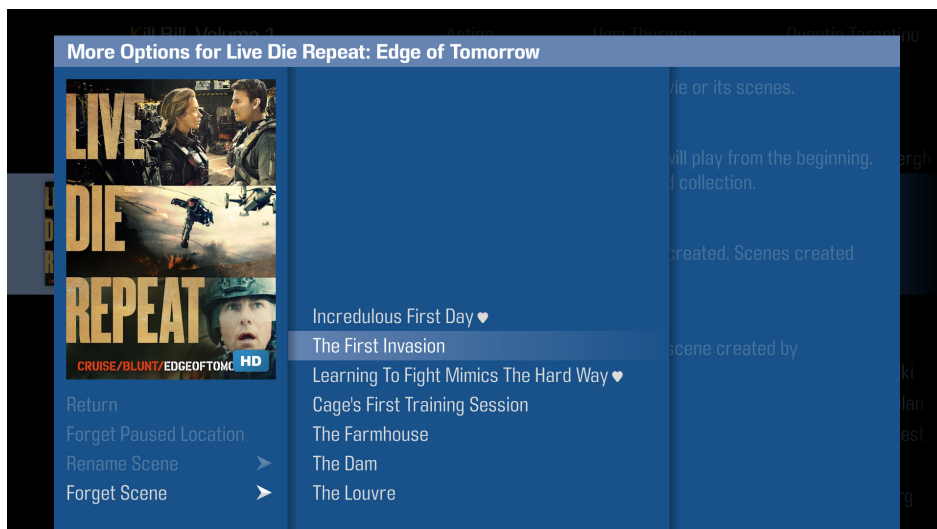

**Figure 12** Select Scene to Forget

5. When the *Forget Scene* box appears, select **Yes, forget the scene** to delete the scene or select **No** to keep the scene. See Figure 13.

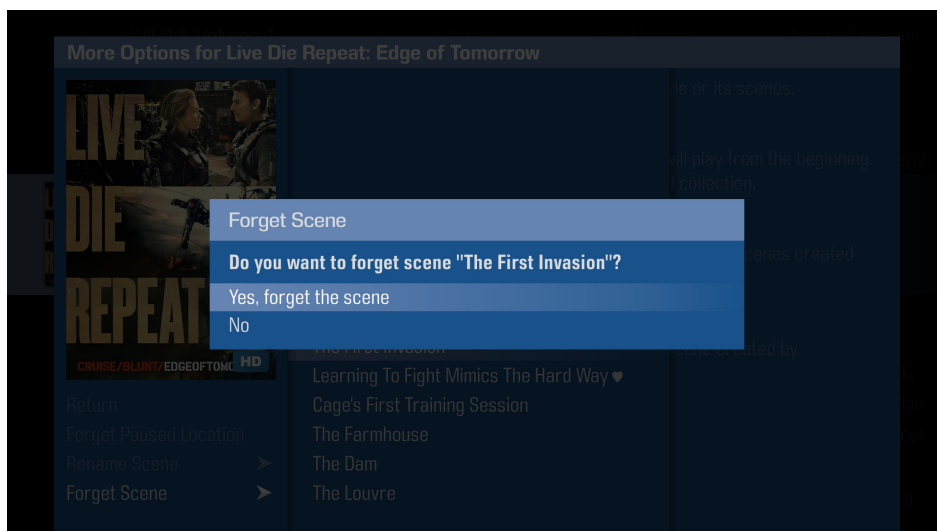

**Figure 13** Forget Scene Confirmation

- Note:** A forgotten user created scene cannot be restored.
- Note:** A forgotten Movie Guide Scene can be restored from the browser interface. Select the movie to open the details page, and then click **Restore this scene**. See Figure 14.





**Figure 14**      **Restore Forgotten Movie Guide Scene**