



kaleidescape

Kaleidescape Reference Guide Philips Pronto TSU9400 Movies and Music

On/Off switch

Select **Movies** or **Music**

Backlight

PAGE +/- moves quickly through lists

Additional controls

OK makes a selection

Direction controls move through covers, lists, tabs, and menus

Rotary wheel scrolls through lists and menus

INFO displays movie playback options or album details



Choose desired view

Displays details of selected movie or album

View next page of details

Rewind Stop Play Pause Fast Forward

Playback controls

CH +/- changes movie chapter or song

MENU goes to Kaleidescape Main Menu or to disc menu during movie playback

Back closes a dialog box or returns to view



kaleidescape

Kaleidescape Reference Guide Philips Pronto TSU9400 Music Only

Browse music by:

- Artist
- Title
- Classical Composers
- Classical Works
- Genres
- Mix Albums
- New Albums
- Collections

Back goes to previous list or returns to **Browse** from **Now Playing**

PAGE +/- moves quickly through lists

Search finds albums and songs by entering text

OK and **right** make selections

Left goes to previous list or returns to **Browse**

Rotary wheel and **up/down** scroll through lists



Music status information

Now Playing displays music details and queue

Scroll through collections, albums, or songs

Rewind Stop Play Pause Fast Forward

Playback controls

CH +/- changes song

MENU or **back** go to previous list or return to **Browse**